ECCELLENZA TOUCH™ BREWER DAILY MAINTENANCE GUIDE



S FILLING THE COFFEE BEAN & POWDER DISPENSERS



5. Close the coffee dispenser lids, install the individual powder lid(s) and then close the main powder dispenser lid.

EMPTY THE CUP STAND



Pull out the cup stand and empty its contents.
Re-install the cup stand.

EMPTY THE WASTE BIN



Remove and empty the waste bin.
Re-install the waste bin.

D CLEAN THE BREWER



- 1. Spray disinfectant on a clean cloth or use sanitizing wipes to clean the dispensing area of the brewer.
- Sanitize the counter top on which the brewer is installed.

See section

MESSAGES THAT MAY APPEAR ON THE SCREEN AND WHAT THEY MEAN

Powder 1 Low Level Powder 2 Low Level Powder 3 Low Level Waste bin full No waste bin Warming up Overflow Call for service Refill the **POWDER 1** dispenser. Refill the **POWDER 2** dispenser. Refill the **POWDER 3** dispenser. Remove the waste bin, discard its contents, and re-install the waste bin. The waste bin is not installed or is not pushed in all the way. Make certain it is installed properly. The water is heating. This message clears automatically once the water is up to temperature. Remove the cup stand, and then remove and clean the floor liner. If this issue persists, call for service. The equipment requires servicing. Contact your equipment provider.



Your partner for business coffee solutions